


# Packing list & circuit diagram


## ● packing list

| quantity            | model NO, | AV 014 |
|---------------------|-----------|--------|
| name                |           |        |
| vacuum cleaner body |           | 1      |
| tubes               |           | 1      |
| Floor brush         |           | 1      |
| brush nozzle        |           | 1      |
| Sofa brush          |           | 1      |
| instruction manual  |           | 1      |

## ● circuit diagram

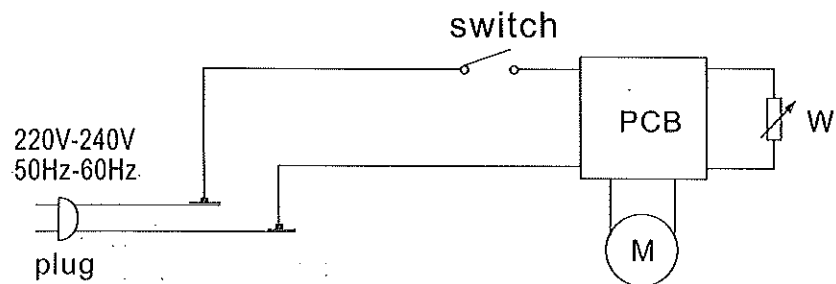

# ASTINA

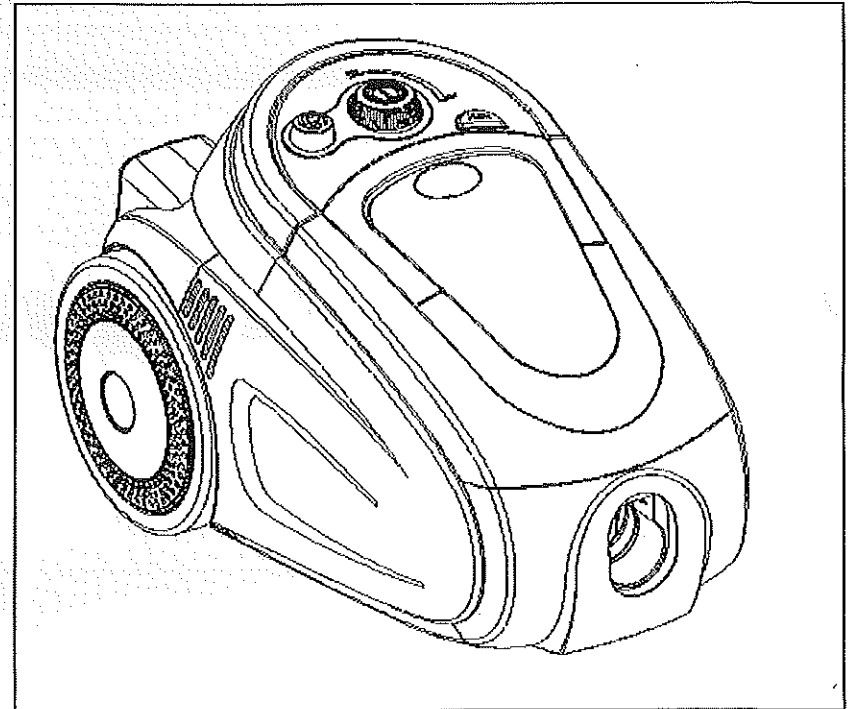


**Model: AV 014**

**VACUUM CLEANER  
INSTRUCTION MANUAL**







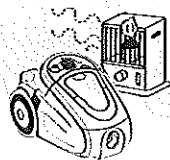

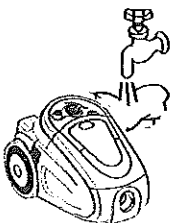

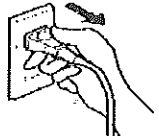
## Description of the appliance

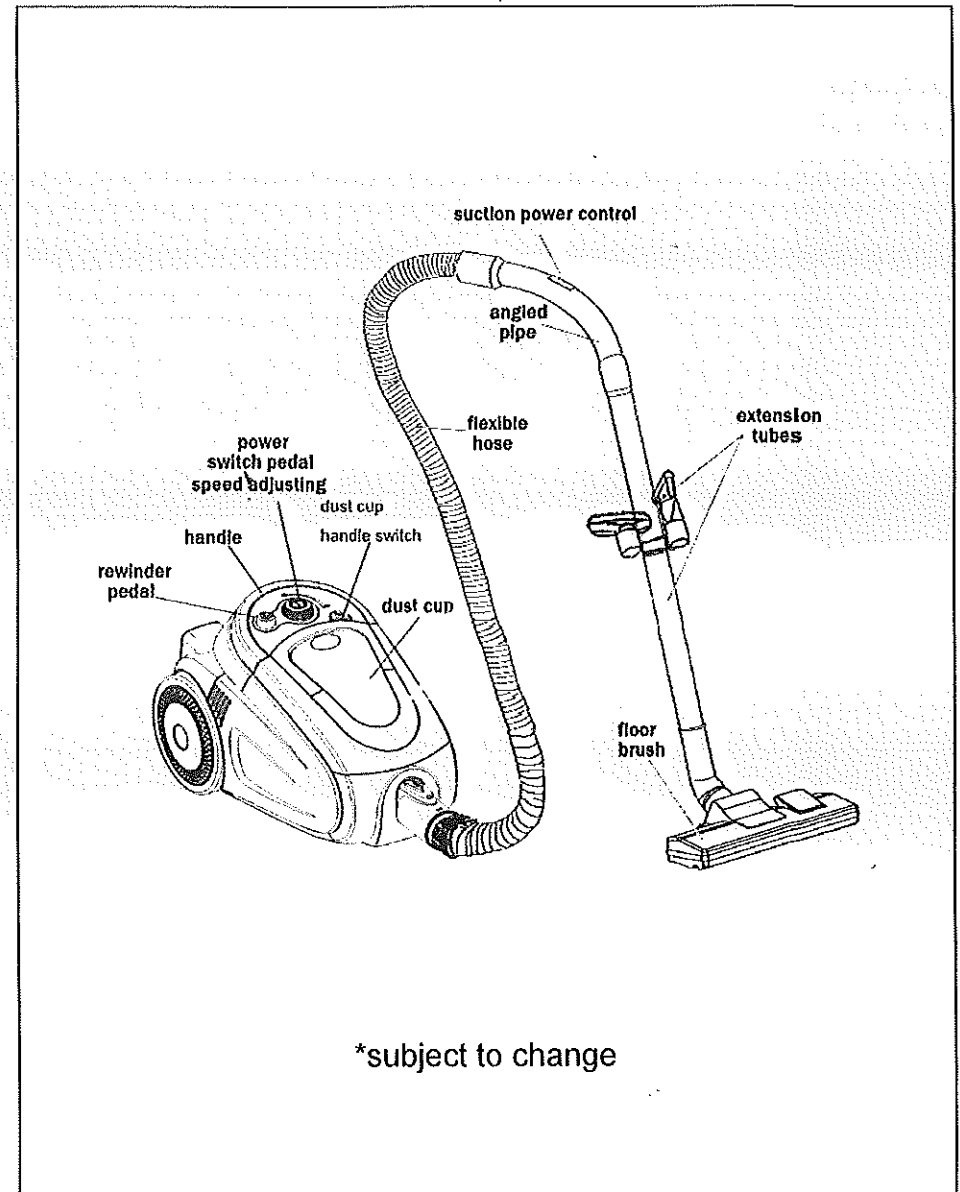- Modern and elegant design
- Multiple air-filter system guarantees a hygienic cleaning
- Drivers accessories: floor brush, nozzle etc
- User-friendly wire rewriter pedal


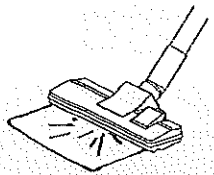

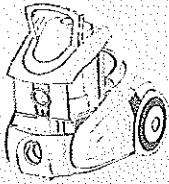

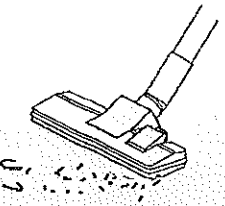

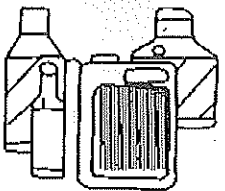
## Know your vacuum cleaner



## Important safety instructions
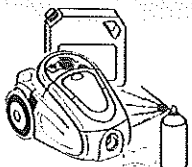
|   |   |  |
|---|---|--|
| <p><br/>Forbid</p>   | <p>This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.<br/>Children should be supervised to ensure that they do not play with the appliance</p> |    |
| <p><br/>Forbid</p>   | <p>If the supply cord is damaged, it must be replaced by the manufacture or its service agent or a similarly qualified person in order to avoid a hazard. For household use only</p>  |  |
| <p><br/>Forbid</p>   | <p>Do not use for absorbing detergent, kerosene, glass, needle, cigarette ash, water, match etc.</p>  |    |
| <p><br/>Forbid</p>   | <p>The appliance should not be exposed to heat</p>  |   |
| <p><br/>Forbid</p> | <p>Do not vacuum any moist or liquid substances , Never immerse the appliance in water.</p>   |  |
| <p><br/>Forbid</p> | <p>Unplug the appliance from the mains supply Socket after use and before every cleaning pull the mains cable, in order to disconnect the appliance from the mains</p>  |  |

## Important safety instructions


|   |   |   |
|---|---|---|
| <p><br/>Forbid</p>   | <p>Do not put any object into openings. Do not use with any opening blocked. Keep the appliance free of dust, lint, hair etc.</p>             |    |
| <p><br/>Forbid</p>   | <p>Do not use the vacuum cleaner without dust container or dust filter in place</p>   |    |
| <p><br/>Forbid</p>   | <p>Do not vacuum any flour, cement etc, in order to avoid the overloads.</p>  |    |
| <p><br/>Forbid</p> | <p>The appliance should only be cleaned with a dry or damp cloth ,it should never immersed in water. Do not use any solvents for cleaning</p> |  |

## Assembly vacuum cleaner


### Connect the hose with vacuum cleaner

**Insert flexible hose into the air-intake:**  
Press the knob until it clicks into the position


**Remove the flexible hose:**  
Unplug the appliance and press the knob at the end of the hose  
Remove it from the air-intake opening.

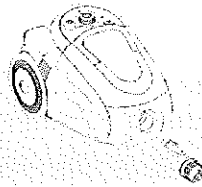


### Fit the telescopic to the angled pipe

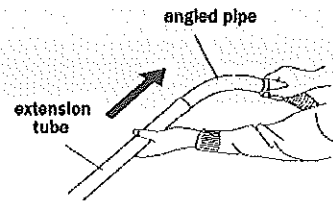


### Fit the floor brush to the telescopic tube

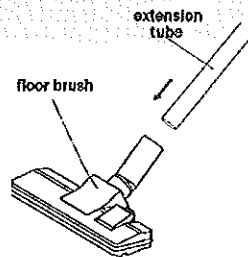


## Operation

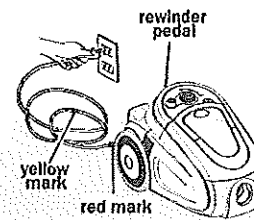

- A yellow mark on power cord shows the ideal cable length. Do not extend the cable beyond the red mark
- To rewind the power cord, press the rewriter pedal with one hand and guide the cord with the other hand

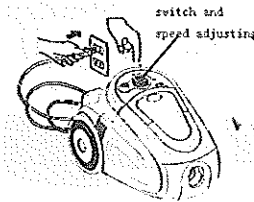

- press the power switch to switch the appliance on.
- Use the electronic speed adjusting to control the suction power of the cleaner

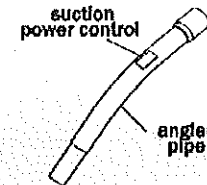


- The suction power can be adjusted with the sliding control on the angled pipe too

## Cleaning tools


### ● Crevice tool:

For cleaning corner edge and draws etc:  
Where is difficult to reach, such as gaps and the keyboard, bookshelf and windows


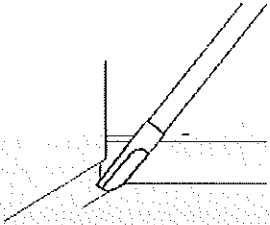


### ● Sofa brush:

For cleaning bed, sofa, couch etc.

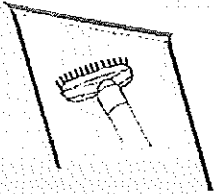


Use of the selector on floor brush :  
Bristles extended for carpets.  
Bristles retracted for hard floors

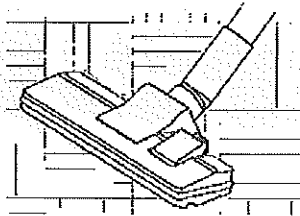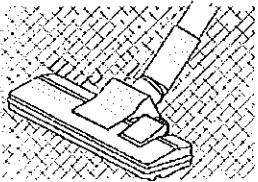

### ● If the angled pipe has blockage


Insert it into the air-intake and  
switch the appliance on

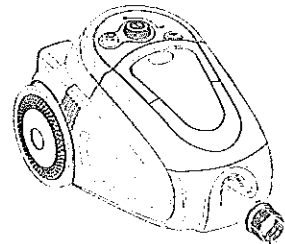



## Cleaning and maintenance

### ● Empty the dust container

- (1) After removing the flexible hose, press the dust cup handle lock button.
- (2) pick up the dust container
- (3) press the dust cup cover lock button and moving rubbish out.
- (4) Remove the dust filter from the container and cleaning by water

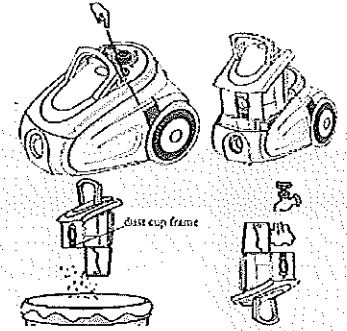

### ● Change filter

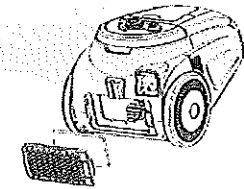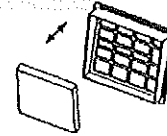


#### Replace the motor filter:

Open the dust container and remove the motor filter. Fix the new filter in the position

#### Replace the outlet filter:

Detach the grille by pulling firmly away from the appliance, remove the outlet filter and replace the new filter. Fix the grille again

### Clean the filter

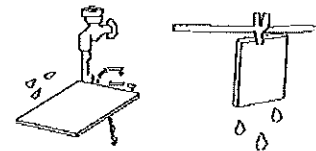

Clean the filter in water and allow them to dry completely before replace them.

## Error detection:

Before you contact our services center, please check the following points

| Problem                                 | Possible reason  | Active   |
|---|--|--|
| Motor does not start                    | -Power card not firmly plugged into outlet<br>-Outlet damaged<br>-Cleaner not switch on            | -Plug unit firmly<br>-Check the outlet<br>-Switch on the appliance.                              |
| Suction power is weaker                 | -unit clogged<br>-Dust filter needs cleaning<br>-Dust container not in position<br>-Filter blocked | -Remove the blockage<br>-Clean the dust filter<br>-Close the dust container<br>-Clean the filter |
| The wire can not be winded completely . | The wire may diverge the wire wheel.   | Draw the wire a little then rewind.  |
| The wire can not be draw out.           | The wire may wind disorder   | Press the rewinder button and try again.   |
| Speed adjust does not work              | Appliance is defective   | Repair the appliance (only specialist)   |
| Power card winds unwanted back          | Rewind mechanisms is defective   | Repair the appliance (only specialist)   |
| The dust container can not be closed    | Dust filter is not in the position   | Fix the dust filter and try again  |

### Warming:

If the supply card is damaged, It must be replaced by the manufacturer or its server agent of a similarly qualified person in order to avoid a hazardous.

### Technical data

Rated voltage: 220V AC


Rated frequency: 50Hz

Power: 2000W

Operating pressure: >22.0kPa

Sound level: <83dB (A)

Operating radius: 5M
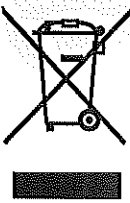
| Correct Disposal of this product  |   |
|---|---|
|  | <p>This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.</p> |

### Warranty information

The manufacturer provides warranty in accordance with the legislation of the customer's own country of residence, with a minimum of 1 year (Germany: 2 years), starting from the date on which the appliance is sold to the end user.

The warranty only covers defects in material or workmanship.

The repairs under warranty may only be carried out by an authorized service centre.

When making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted

The warranty will not apply in cases of:

- Normal wear and tear
- Incorrect use, e.g. overloading of the appliance, use of non-approved accessories
- Use of force, damage caused by external influences.
- Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions
- Partially or completely dismantled appliances