

CONTROL PANEL:



button

Press the **ON/OFF** button once, the fan will start at low speed , normal style and normal mode.

Press the **ON/OFF** button again will turn the fan off.



button:

To adjust fan speed, press once for medium speed, and twice for high speed.

Press the third time to return to low fan speed.



button:

to select normal mode, natural mode or sleep mode.

NORMAL: unit operates in selected fan speed, High, Medium or Low.

NATURAL mode: unit operates according to computerized intervals of changing speeds.

SLEEP mode: unit operates according to computerized intervals of changing speeds



button: select AUTO or normal mode.

Press it once, you can select AUTO mode and the sign "AUTO" will be on. At this mode, the fan will select proper output automatically depending on the current room temperature and the system set temperature . If room temperature is more than 26°C, the motor will operate, if room temperature is less than 24°C, the motor will stop automatically.

Press it again to select normal mode.



button

To activate the Oscillation feature, press the **OSC** button once.

Press the **OSC** button again to turn the Oscillation feature off.



button

When the fan is in use, you can set the time to close the appliance. Press the **TIMER** button, the temperature will switch to display and flash the default time. The default time is 0.0h. You can press the timer buttons continually to set the timer off function between 0.5 and 8 hours in 0.5h increments.

The time will be set within 5 seconds once you finish pressing the button and the time setting value will display on the LED screen. When the time run out,

REMOTE CONTROLLER



When you plug into any 220-240V~source, You can turn the night light on or off by



This product contains recyclable materials. Do not dispose this product as unsorted municipal waste. Please contact your local municipality for the nearest collection point.

 
WARNING!

If the fan has any problems, please contact Customer Service
DO NOT ATTEMPT TO OPEN OR REPAIR THE FAN YOURSELF. DOING SO COULD VOID THE WARRANTY AND CAUSE DAMAGE OR PERSONAL INJURY

ASTINA

TOWER FAN OPERATION MANUAL

Model : AC 014A

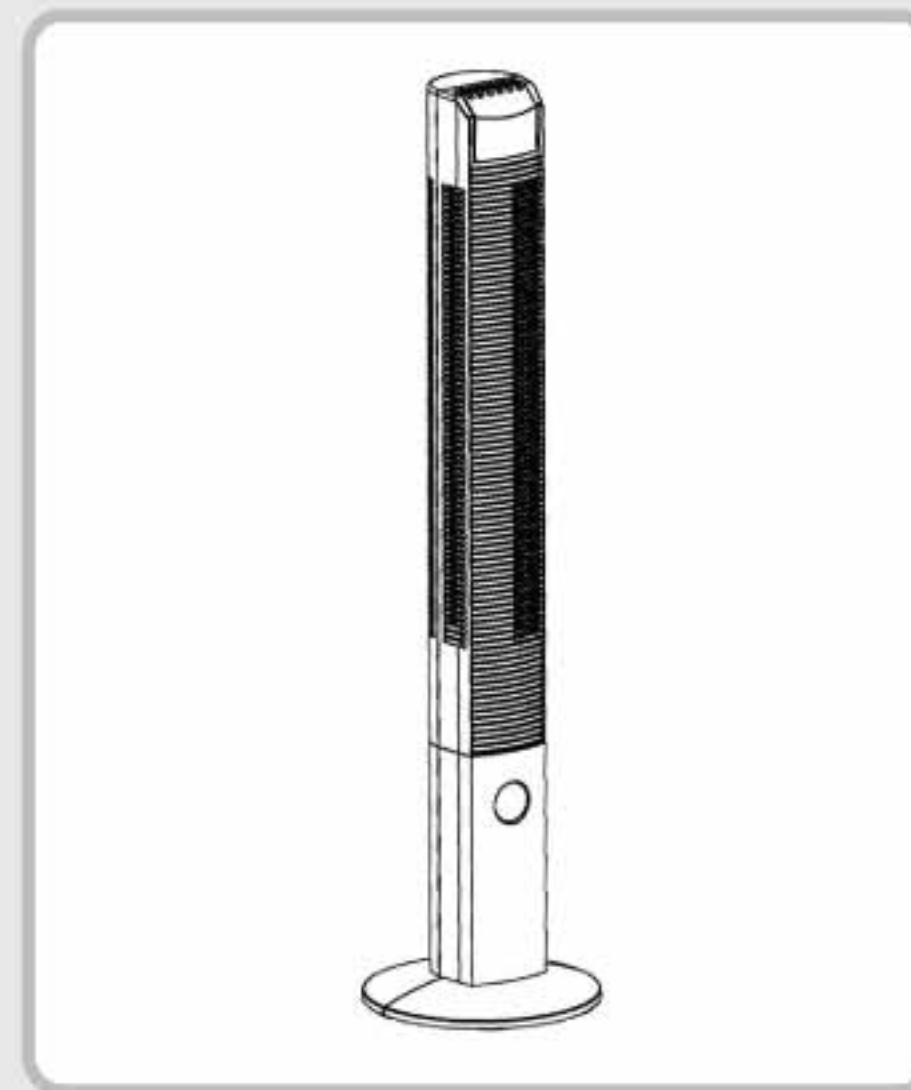

READ AND SAVE THESE SAFETY INSTRUCTIONS BEFORE USING THIS FAN

บริษัท แอสทีน่า (ประเทศไทย) จำกัด
36/19-20 ซ.รามคำแหง 43/1
ถนนรามคำแหง แขวงพลับพลา
เขตวังทองหลาง กรุงเทพฯ 10310
โทร. 02-934-7080 แฟกซ์ 02-934-5448

IMPORTANT SAFETY INSTRUCTIONS

READ AND SAVE THESE SAFETY INSTRUCTIONS BEFORE USING THIS FAN

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- 1 Use this fan only as described in this manual. Other use not recommended may cause fire, electric shock or injury to persons.
- 2 This product is intended for household use ONLY and not for commercial, industrial or outdoor use.
- 3 To protect against electric shock: do not place fan on windowsills, immerse unit, plug or cord in water or spray with liquids.
- 4 To reduce the risk of shock, this plug is intended to fit the outlet. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt to defeat this safety feature.
- 5 Close supervision is necessary when any appliance is used by or near children.
- 6 Turn the fan OFF and unplug the fan from the outlet when not in use, when moving the fan from one location to another and before cleaning.
- 7 To disconnect the fan, first turn the unit OFF, grip the plug and pull it from the wall outlet. Never pull the plug by the cord.
- 8 Do not operate the fan in the presence of explosive and/or flammable fumes.
- 9 Do not place the fan or any parts near an open flame, cooking or other heating appliance.
- 10 Do not operate fan with a damaged cord or plug, or if the product malfunctions, or dropped and damaged in any manner.
- 11 Avoid contact with moving fan parts.
- 12 The use of attachments not recommended by the manufacturer may be hazardous.
- 13 Place the fan on a dry level surface.
- 14 Do not hang or mount fan on a wall or ceiling.
- 15 Do not operate if the fan housing is damaged.
- 16 A loose fit between the AC outlet (receptacle) and plug may cause overheating and a distortion of the plug. Contact a qualified electrician to replace loose or worn outlet.
- 17 Only use on 220-240V, 50/60Hz power supply.
- 18 If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.

 
WARNING:

- 1 To Reduce The Risk of Fire or Electric Shock, Do Not Use This Fan With Any Solid State Speed Control Device.
This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capability, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 2 Children should be supervised to ensure that they do not play with the appliance

ASSEMBLY INSTRUCTIONS

Do not use this fan before finish assembling the base.

Base Assembly

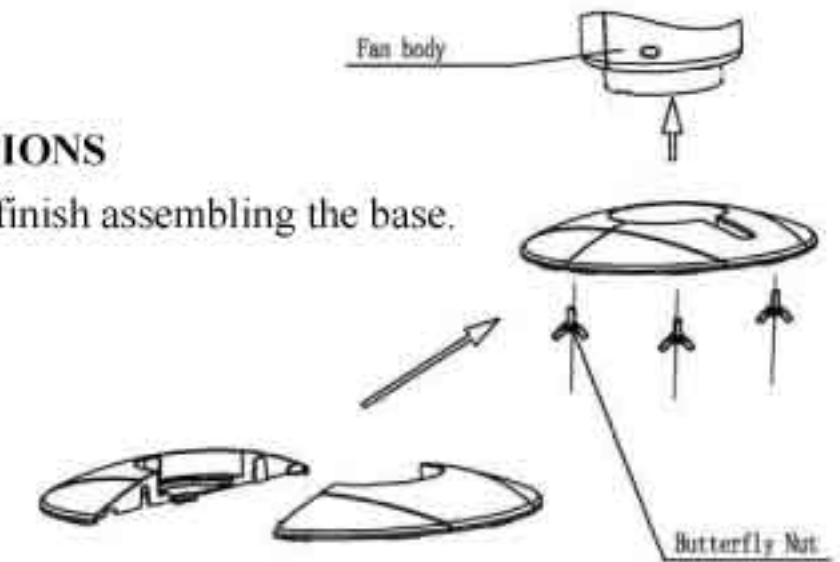

PARTS AND

Fig.1 Control panel


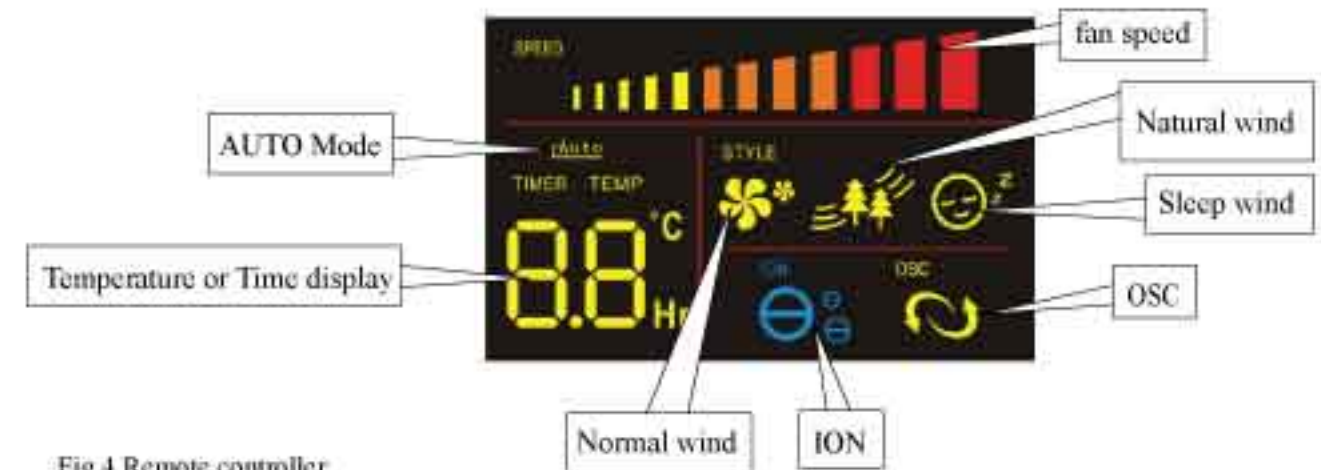 


Fig.4 Remote controller

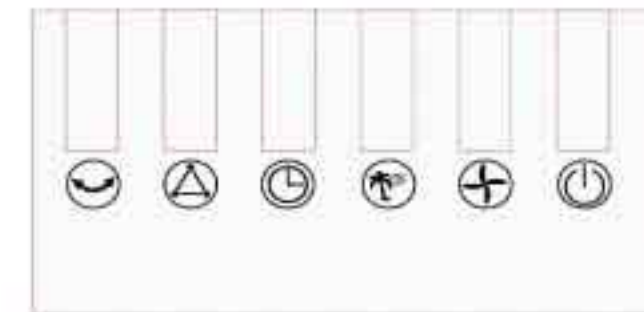 

FAN OPERATION

Plug into any AC 220-240V, 50Hz source, insure that the plug and the socket fit well. The LED screen will display the current room temperature that means the fan is ready. You can operate the appliance by the control panel or remote controller.