


Character

1. Modern design.
2. Energy-saving, low noise, resistant structure and great stability. Suitable for use in homes, hotels, schools, etc.
3. The plastic parts of this product use high quality and durable plastic.
4. Double security system, "temperature control" and "heating protection". Hot water temperature is always between 80 ° C and 95 ° C, enough to make coffee or tea, or other instant food.
5. The water dispenser's cooling system is durable and suitable for use during the summer.
6. This product can be used with bottled water or a water purifier.

Parts name

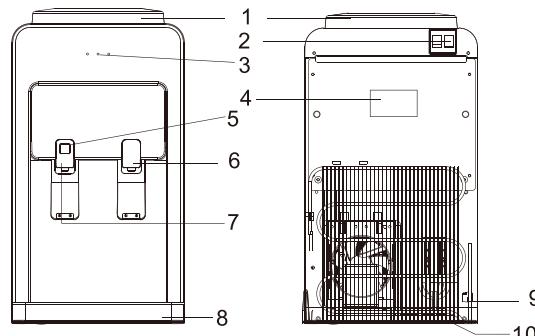

NO.	NAME	NO.	NAME
1	Bottle Seat	6	Cold Water Faucet
2	Power Switch	7	Hot Water Faucet
3	Indicator Lights	8	Drip Tray
4	Information Plate	9	Drain Plug
5	Safety Push Button	10	Electric Power Cord

Note: The graphic is for reference only. The current device may have differences with the graphic.

Operation process

1. Insert the bottle vertically on the seat and press the water faucets until water flows out of the red hot water faucet.
2. Insert the power plug to the wall socket and turn the electric switches to ON position to start the appliance. DO NOT MOVE BOTH SWITCHES AT THE TIME. Cooling and heating indicator lights should light up. The appliance is designed to provide hot or cold water whenever you need it. It will automatically turn on and off when the water reaches the desired temperatures.

คู่มือการใช้งาน

OPERATION MANUAL WATER DISPENSER

น้ำร้อน น้ำเย็น : AD202CH



NON CFC (เป็นมิตรต่อสิ่งแวดล้อม)



บริษัท เพียวรัลมนุ จำกัด เป็นผู้ผลิตและจัดจำหน่าย
เลขที่ 1 ซอยรามคำแหง 199 ถนนรามคำแหง แขวงเมืองบุรี
เขตเมืองบุรี กรุงเทพฯ 10510
โทร. 0-2136-7444 โทรสาร 0-2136-7449, 0-2136-7450

ข้อปฏิบัติในการติดตั้ง

1. เตรียมหัวน้ำร้อน-เย็น และน้ำเย็น ถูกออกแบบมาเพื่อใช้ภายในอาคารเท่านั้น โปรดหลีกเลี่ยงการติดตั้ง บริเวณที่ กลางแจ้ง หรือพื้นที่เปียก ละมีความชื้น อย่างเช่น บริเวณใกล้สระน้ำ, ชานชาลา หรือ ห้องอาบน้ำ
2. เตรียมหัวน้ำร้อน-เย็น และน้ำเย็น ควรติดตั้งบนพื้นที่เรียบ ไม่ล้าดเสียง หรือชุรชะเพื่อป้องกันการติดล็อก ของตัวเครื่องขณะทำงาน
3. ติดตั้งบริเวณพื้นที่กว้างๆ เช่น ห้องน้ำ ห้องนอน ห้องครัว ห้องนั่งเล่น ห้องทำงาน เป็นต้น
4. เพื่อยืดอายุการใช้งานของเครื่อง ควรติดตั้งเครื่องในสภาพอากาศที่สะอาดปลอดภัย เช่น ไม่เป็นพิษทางอากาศ
5. โปรดระวังขณะเปิดกล่องสินค้าและดึงพลาสติกหุ้มออกจากตัวเครื่องให้ใช้ความระมัดระวัง
6. ขณะทำการซับชาย หรือบอร์ทธุ์สินค้า ต้องวางเครื่องในแนวตั้ง ห้ามเอียงเกิน 45 องศา
7. หากทำการเดื่อนข่ายเครื่องใหม่ ควรพักเครื่องไว้อ่างบ้อย 1 ชั่วโมง ก่อนการเปิดสวิตช์เครื่องใช้งานในครั้งต่อไป

วิธีการใช้งาน

1. ก่อนการใช้งาน ควรทำความสะอาด กานในถังเก็บน้ำ และกานที่ล้างทังก่อน
2. ตั้งคันบรรบุน้ำเข้ากับตัวเครื่อง โดยต้องให้มั่นใจว่าปากถังน้ำเข้ากับตัวเครื่องเรียบร้อย
3. เมื่อต้องการใช้ระบบทำความร้อน-เย็น ต้องมั่นใจว่าระบบน้ำร้อน (เฉพาะรุ่นมีระบบน้ำร้อน) ของตัวเครื่องไฟฟ้าได้ โดยสะดวกก่อนที่จะเปิดสวิตช์น้ำร้อน การตรวจสอบการไหลของน้ำสามารถกระทำได้โดยกดดันยกหัวน้ำร้อนตัวไว้ เพื่อทำการเลือกการทำงานของหัวไก่ไฟฟ้าได้สะดวก
4. ควรระวังบ้านหรือห้องนอนขนาดที่กำลังตั้งว่าบ้านหลังในถังเก็บน้ำ เพราอาจทำให้ไฟดับงงไฟฟ้าในเครื่องได้
5. สำหรับรุ่นที่มีระบบบ้านร้อน จะมีปุ่มสวิตช์ ปิด/เปิด ของถังเก็บน้ำร้อนอยู่บริเวณด้านหลังของเครื่อง และกำหนด สัญลักษณ์ (I) หรือ(ON/OFF) สำหรับการเปิดหรือปิดเพื่อใช้งาน
6. การทำงานของระบบทำน้ำเย็นจะทำงานโดยอัตโนมัติหลังจากจ่ายไฟเข้าตัวเครื่อง ในบางรุ่นจะมีสวิตช์ ปิด/เปิด อยู่ ด้านหลังเครื่อง (รุ่นที่เป็นน้ำเย็น 1 ก้อน)
7. หลังจากเดื่อนเปิดทำงานแล้ว การทำความสะอาดอัตโนมัติใช้เวลาประมาณ 15-20 นาที และระบบบ้านร้อนจะใช้เวลา ประมาณ 10 นาที

ข้อควรระวัง

1. ห้ามเปิดเครื่องก่อนเติมน้ำใส่ในถัง เมื่อจากการเปิดเครื่องโดยปราศจากการบรรจุน้ำอาจทำให้อุปกรณ์ของเครื่องเสียหายได้
2. กรณีเดื่อนข่าย หรือเปลี่ยนบันทึก ให้ระวังน้ำกระฉอก หรือหกออกมา เพราะอาจทำให้เครื่องเสียหายถ้าเปียกให้แห้ง
3. ก่อนที่จะนำเครื่องซ่อมแซมหรือตรวจสอบให้ล้างออกก่อนทุกครั้ง
4. เตรียมถังน้ำสำหรับใช้กับบ้านเดี่ยวที่สะอาดเท่านั้น การใช้น้ำประทุมอันอาจทำให้เครื่องเสียหาย หรือหยุดการทำงานตลอด
5. วิธีการเติมน้ำ
 - 5.1 ใช้มือยกหัวน้ำเข้าไปในถังน้ำแล้วปิดก๊อกก่อนทุกครั้ง
 - 5.2 เติมน้ำด้วยความระดับเริ่วๆ ไปให้ถังน้ำล้นจากตัวเครื่อง
 - 5.3 วางถังน้ำให้ถูกต้อง โดยอย่าให้อุ่นไปทางชากหรือห้องขาว



ข้อแนะนำสำหรับใช้งาน

1. ต้องติดตั้งสายดินให้ถูกต้องพร้อมติดตั้งเครื่องทำน้ำเย็น
2. ต้องติดตั้งเครื่องป้องกันอันตรายจากไฟร้อน
3. ต้องติดตั้งเครื่องทำน้ำเย็นในบริเวณที่เป็นอนุญาตไฟฟ้า และไม่มีปีกอันตราย เช่น ปุ๊ปันด้วยยาง ฯลฯ และไม่มีน้ำร้อนและ
4. ควรตรวจสอบสภาพความปลอดภัยของเครื่องทำน้ำเย็นโดยช่างผู้ชำนาญงานเป็นประจำอย่างน้อยทุก 6 เดือน

9. Do not pull out the cable to unplug. Do not turn ON and OFF the appliance by connecting it and disconnecting it from the source of electricity.
10. Do not clean the outside of the appliance with water to avoid electric shock. Clean it with a soft cloth.
11. If you are not using the appliance for a long period of time or during the night, you can turn it OFF to save energy.
12. Do not attempt to change the power cord by yourself if it has any damage. Contact the manufacturer or specialized service personnel.
13. If the power cable suffers any damage, contact the manufacturer, his service representative or qualified personnel.
14. The equipment must be installed keeping easy access to the electrical plug.
15. WARNING - to avoid the risks of an unstable installation, the equipment must be installed following its instructions.
16. WARNING - keep the ventilation openings at the back of the appliance uncovered and unobstructed.
17. NOTICE - do not damage the refrigerant circuit.
18. The environmental temperature for this appliance should be between 18° C and 38 ° C.
19. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and use maintenance shall not be made by children without supervision.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance
- This appliance is intended to be used in household and similar applications such as
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses and by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - catering and similar non-retail applications
20. Do not place other appliances inside this equipment unless those are recommended by the manufacturer.
21. Do not store explosive substances such as spray cans inside this appliance.

What to do in case of problems:

First turn off the water dispenser and disconnect it from the source of electricity.


Problem	Possible cause	How to solve
Lights do not lit	1.Appliance is not connected to the electrical system 2.The switch is not ON	1.Make sure that the switch is ON and the plug is connected 2.Turn the switch into ON or turn the timer
Leaking	1.The water container is broken 2.The water pipe is broken 3.The faucet is damaged	1.Replace the water container 2.Replace the water pipe 3.Replace the faucet
Not heating	1.Heating switch is damaged or does not make contact 2.The heating tank is burnt 3.The electrical connection is loose	1.Replace the switch and check the connections 2.Replace heating tank 3.Repair connections
Not cooling	1.Cooling switch is damaged or does not make contact 2.The electrical connection is loose	1.Replace the switch and check the connections 2.Repair connections

This kind of product is used in household and similar environment.

Technical Information

Model	AD202CH
Voltage - Frequency	220V~ 50Hz
Heating power	420W
Cooling power	85W
Water Heating capacity	5.0 L/h
Water Cooling capacity	2.0 L/h
Prevention of electric shock	Type I

Circuit Illustration

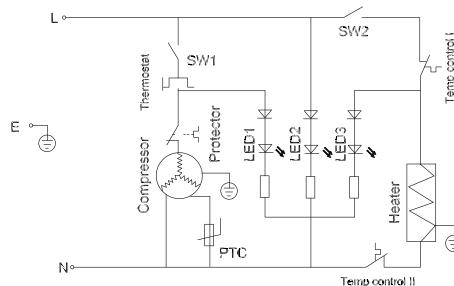

Note: If technical data or the circuit graphic change, the information sheet may not reflect those changes.


Attention

1. Make sure to have poured water from the hot water faucet before plugging and switching the appliance ON to heat. If the dispenser is turned ON with an empty water tank, it can be damaged.
 2. When you are ready to move the water cooler, do not tilt more than 45° to avoid damage to the compressor.
 3. Always install the dispenser indoors, on a flat surface and at a distance no less than 15 cm from the back wall.
 4. Keep this appliance away from high temperatures and in a dry and ventilated place. Never install it in the open air or under rain or direct sunlight.
 5. Children should not use the red hot water tap.
 6. If the appliance is not going to be used for a long period of time, unplug it and drain all water in its interior.
 7. Before the first use and after a long period of not using it, the water tank and water pipes should be cleaned well. If possible, they should be disinfected and disinfect, and the first heated water must be discarded (switch the heating switch to OFF while draining the system).
 8. Wash and disinfect the system every 3-6 months with a suitable cleaner and according to its instructions for use.

การกำหนดความสะอาด

- การทำความสะอาดภายนอกให้ได้ใช้ชามหูบ้านหมาๆ หรือน้ำยาทำความสะอาดแบบอ่อนๆ เช็ดบริเวณภายนอก เครื่องส้วมด้านในให้เล็กน้อยสามารถกำจัดความสะอาดโดยใช้บัวข้าวทำความสะอาดหรือน้ำยาข้าวเชื้อแบบอ่อนๆ ได้ ในส่วน พื้นที่ว่างในดันเก็บบ้าร้อน สำหรับรุ่นที่มีระบบหัวร้อน(เบริเว่นดังส่วนกลางของดังกล่าว) ไม่ควรใช้น้ำยาข้าวเชื้อได้ หากทำความสะอาดในดังนั้นร้อนและระหว่างน้ำเย็นจะออกฤทธิ์ผ่านออกทางสายท่อหัวไก่ เป็นและใช้น้ำเย็นทำความสะอาดดังกล่าวเพื่อบำรุงให้ตัวเครื่องอยู่ในสภาพดี
 - ในการทำความสะอาด ห้ามนำเดื่องมาเหลาในบ้า หรือใช้บ้าล้างเดื่องโดยตรง
 - เบริเว่นแพงรับประทานความร้อน ควรรักษาความสะอาดในปี๊หอกปรกมีฝุ่นเพื่อประสิทธิภาพในการใช้
 - หลังจากทำความสะอาดแล้วก่อนเปิดสวิตช์ทำงาน ควรทิ้งไฟฟ้าก่อนและควรทำการบรรจุไส้กันน้ำให้เรียบร้อย


การป้องกันและการใช้งานอย่างปลอดภัย

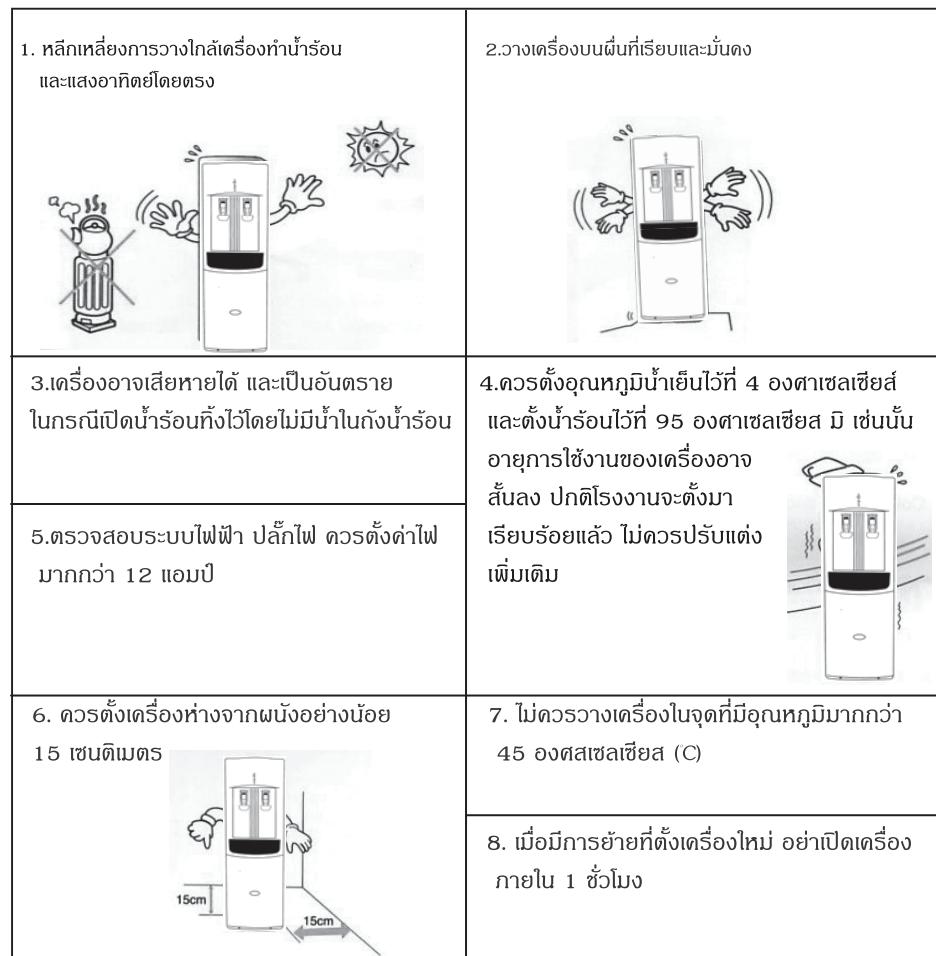

④

MODEL

AD202CH

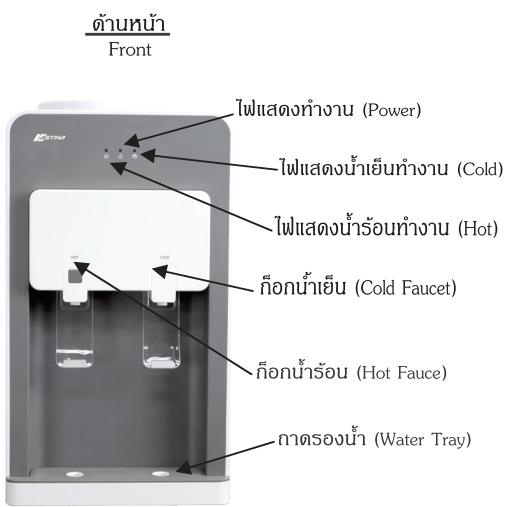**รายละเอียดสินค้า**

รายละเอียดสินค้าทุกรุ่น	จ่ายน้ำร้อน น้ำเย็น
กำลังไฟ	220V / 50Hz
การกินไฟความเย็น	0.7 A
การกินไฟ ความร้อน	2.0 A
ระบบความเย็น	
ตอมเพรสเซอร์ (วัตต์)	85 วัตต์
บ๊า呀	HFC-134 A
ระบบควบคุมความเย็น	เทอร์โมสตาร์ท
อุณหภูมิความเย็น	4°C~10°C
กันบรรจุน้ำเย็น	2.7 ลิตร
ระบบความร้อน	
การกินไฟ	420 วัตต์
ระบบทำความร้อน	Band Heater
ควบคุมความร้อน	Bi-metal
อุณหภูมิความร้อน	80°C~95°C
กันบรรจุน้ำร้อน	0.8 ลิตร

Water Dispenser

USE SPECIFICATION

Model:AD202CH

Please read the use specification carefully before you use this product, and let the use specification be well placed.